

# Instruction Manual

Thank you for purchasing this product. Before using this product please read the instructions carefully. After reading the instruction sheet, please keep it with you for reference.

## Please carefully read the following.

If the product is not functioning correctly, please check the following.

### ① Controller can be used on the home screen but not in game

For the PlayStation®4, if the user account registered to the controller is different from the user account you used to start the game the controller will not function in game. Please use the controller to sign in with the appropriate user account before playing.

### ② Controller will not function even after pressing the PS Button.

If the PlayStation®4 is brand new or if all of the settings have been set back to default this product cannot be used on the initial setup screen. Use the DUALSHOCK®4 to complete initial system set up. Please charge this product fully before using it for the first time.

### Regarding Wireless Technology

This product uses a 2.4 GHz frequency band. Other wireless devices may use the same frequency band.

To prevent radio interference with other wireless devices, please pay attention to the following items:

1. Before using this product, please confirm that no other wireless devices are being used nearby.
2. In the unlikely event that radio interference occurs between this product and other wireless devices, change the area this product is used or turn the other wireless device off.

Please do not use in prohibited areas such as hospitals or near other electronic devices.

\* Cardiac pacemaker, other medical electronics, fire alarms, automatic doors, and other automatically controlled electronics.

### Regarding Battery

If batteries leak, please do not touch the acid with your bare hands.

- If acid gets into your eyes, immediately wash it with clean water and consult your doctor.
  - If acid gets onto your skin or clothes, immediately wash it off with clean water. For any injury, please consult your doctor.
- Do not place this product near heat sources or leave under direct sunlight. Overheating may cause malfunction.

Internal battery life may deplete over the time.

The charge and discharge life of the internal battery of this product is about 500 times. Battery life depends on storage method, usage, environment, etc.

If the battery life drastically diminishes or device stops functioning on a full charge, the battery life has come to its end.

Recharge the battery at least once a year to maintain function even if it has not been used for a prolonged time.



Lithium Polymer battery is recyclable resources. Please contact us in case of recycling.

 
Li-ion 00

## Warning

Caution To Parent/Guardian, Please read carefully

- This product contains small parts. Keep it away from children under 3 years old.
  - Do not place it within the reach of infants. If small parts are swallowed, consult your doctor immediately.
  - Do not place it in humid or dusty areas. ● Avoid any strong impact to this product. ● Please do not pull on the buttons of this product.
  - Never disassemble, repair or modify this product. ● If the product needs cleaning, use only a soft dry cloth.
- Do not use any chemical agents like benzene or thinner. ● Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of misuse.

## Included



Controller x1



Instruction manual x1



Do not place product in mouth.



Do not immerse in water.



Do not place product near open flame.



Do not step on the product.

## Platform:

PlayStation®4 **Important** Before using this product with the PlayStation®4 system, please read the included instructions carefully.

※For optimal performance please update PlayStation®4 system software to the most recent version (Minimum required version: Ver. 4.50) before using this product. For information about your system software version and updating system software, please refer to the instructions provided with your PlayStation®4 system.

※This product does not have a stereo headset jack, vibration function, or motion sensor function.  
May not be compatible with every PlayStation®4 software title.


※This product is not compatible with PlayStation®3, PlayStation®2, PlayStation® or PS One®.

※Visit our HORI Web Site and/or Support page (<http://www.hori.jp/support/>) for further support.

## ⚠ Voice Chat

To use voice chat, connect a USB or Bluetooth headset (sold separately) directly to your PS4™ system.

## Layout

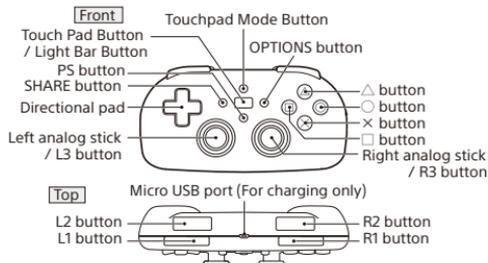

※ Please do not press any buttons while the PS4 is starting up from Sleep Mode.

## How to Charge

Charge this product by using a micro USB to connect this product with a USB port on the PlayStation®4 console. When charging LED indicator will flash orange, and turn off when charging is complete.

\*USB Cable not included.



## How to Connect

Must pair with PlayStation®4 first.

※Once this product is paired, there is no need to pair again. Press PS button to use the product.

※If this product is paired to a different PlayStation®4, it must be re-paired again to be used with the previous

※Cannot be paired using a USB cable PlayStation®4.


Before you pair



Charge via USB cable when battery is low.


\*Can be only charged when PlayStation®4 is turned ON or in Standby Mode.

1

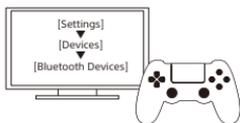

Use separate controller to navigate from the PlayStation®4 console Home screen.  
Select Settings > Peripherals > Bluetooth devices.

2

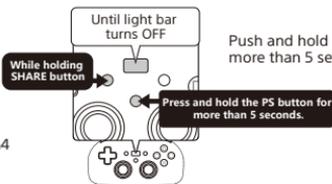

Push and hold SHARE and PS button for more than 5 seconds until light bar turns OFF.

3



Select "HORI Wireless Controller Light" from the list to complete the pairing.

### How to use Touch Pad

The left or right analog stick can function like the DUALSHOCK®4 wireless controller's touchpad.

- Press and hold the Touchpad Mode button for two seconds to start Touchpad Mode.
- While in Touchpad Mode, use the left or right analog stick for navigation and entry.
- Touchpad Mode will end if there is no analog stick movement for three seconds.
- Pressing any of the following buttons will cancel Touchpad Mode.

Directional pad / ○ button / × button / △ button / □ button / L1 button / L2 button / R1 button / R2 button / SHARE button / OPTIONS button / PS button

 
Touchpad Mode Button



### Tap (light touch with your finger)


#### Tap (Tapping one point)

- 1 Press and hold the Touchpad mode button for two seconds.
- 2 Tilt either analog stick then push it in.
  - Press the button two times to double tap.
  - To touch and hold, keep the stick pressed down.




#### Tap (Tapping two points)

 - 1 Press and hold the Touchpad mode button for two seconds.
- 2 Tilt both sticks.
- 3 Push both sticks in.



### Drag / Flick (Slowly or quickly moving and releasing your finger)

 
- 1 Press and hold the Touchpad mode button for two seconds.
- 2 Push either analog stick in then tilt to drag. (Quickly tilt and release the analog stick to flick.)



## Pinch In / Pinch Out (Using two fingers to pinch or widen)

### Pinch In

- 1 Press and hold the Touchpad mode button for two seconds.
- 2 Push right stick and tilt left stick left.

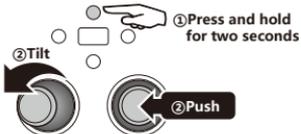


- 3 Push left stick and tilt right stick left to Pinch In.



### Pinch Out

- 1 Press and hold the Touchpad mode button for two seconds.
- 2 Push right stick and tilt left stick left.

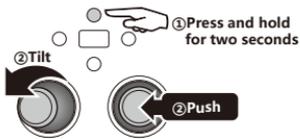


- 3 Push left stick and tilt right stick right to Pinch Out.



## Click

- 1 Press the Touchpad Button to click. (Press the button two times to double-click)

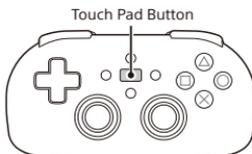

## Turbo Mode

The following buttons can be set to Turbo or Turbo hold mode. (Turbo Speed 12/sec)

Turbo Hold: Keep turbo settings without pressing buttons. (Will turn OFF when the button is pressed)

Turbo/Turbo hold feature buttons

Direction Pad (UP, DOWN, LEFT or RIGHT) \* / ○ button / × button / △ button / □ button / L1 button / L2 button / R1 button / R2 button

\* The directional buttons up and down, or left and right cannot be assigned to TURBO hold simultaneously.

## How to set

### Turbo Mode

○ + ○  
Hold down the Touch Pad Mode button and

○  
quickly press the button that you want to set to Turbo mode



### Turbo Hold Mode

○ + ○  
Hold down the Touch Pad Mode button and

○  
quickly press the button that you want to set to Turbo mode



### Turbo OFF

○ + ○  
Hold down the Touch Pad Mode button and

○  
quickly press the button that you want to set to Turbo mode

Light Off \* In the case that after deactivating the turbo function, the turbo indicator LED does not turn off, this means that there is still a button set to turbo / turbo hold.

### OFF (All buttons)

○ + ○  
Hold down the Touch Pad Mode button and

○  
Quickly press OPTIONS button

Light Off \* If you forget which buttons you have set to Turbo mode, deactivate them all and reassign, as you require.

※LED will flash according to the turbo speed.

※Press SHARE button and PS button to reset Turbo Mode. When restarting game play, you will need to set the Turbo function again.

 
## If the controller does not respond or responds arbitrarily

Battery may be depleted when controller or buttons do not respond. Charge the product according to the previous "How to Charge" section. If the controller does not respond or reacts when not in use, press the reset button on the bottom of the controller using a thin object to reset the controller and reconnect. If the controller still does not respond, please contact us.

If the button does not work immediately after connecting the controller, cancel registration of the device and pair again.

If DUALSHOCK®4 becomes unable to connect, turn off the power of the PlayStation®4 console once and turn ON the power again.

Reset button



## Specification

Size	(W) 5.4in (136mm) x (D) 1.2in (30mm) x (H) 2.7in (68mm)
Weight	4oz (120g)
Battery duration from full charge (approx)	10 hours (may vary via environment)
Charging time	Up to 2 hours

## Target age: 6 years and over

- The image on the package may differ from the actual product.
- The manufacturer reserves the right to change the product design or specifications without notice.
- "PlayStation4", "PS4", and "DUALSHOCK4" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved.
- "Bluetooth" is registered trademark of Bluetooth SIG, Inc.
- "PS" & "DUALSHOCK" are registered trademarks of HORI.