

Instruction manual

Thank you for purchasing this product.
Before using this product please read the instructions carefully.
After reading the instruction manual, please keep it for reference.

Caution

- Keep this product out of the reach of children under 3.
- Keep this product away from small children.
Seek medical advice immediately if it is swallowed.
- Please be careful and not allow children to wrap the cord around their neck.
- Keep the controller away from dusty or humid areas.
- Do not use this product if damage or alteration occurs.
- Do not get the product wet or leave it where it can get wet. It may cause an electric shock or defect.
- Do not leave the product around a heater, audio amp, etc. Do not leave it under direct sunlight. It may cause a defect.
- Do not touch the metal parts of the USB plug with your finger or other metal material. It may cause injury or defect.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the controller.
- Never disassemble, repair or modify this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzine or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.

Included



Controller: x 1



Instruction manual: x 1

Platform

Nintendo Switch / PC(Xinput)

| | |
|---------------------|-------------------------------|
| Supported OS | Windows®10 / 8 ~ 8.1 / 7 |
| System requirements | USB Port, Internet Connection |



Important

Please read the Nintendo Switch instructions carefully before you use this product with the Nintendo Switch console. Make sure that your Nintendo Switch™ is updated with the latest system software.

※ This product is not a wireless controller.

※ Please be aware that unexpected action may occur if the Turbo function is used in the HOME Menu.

Layout

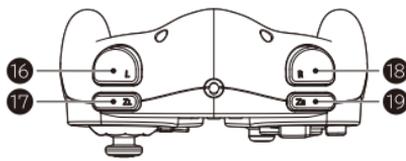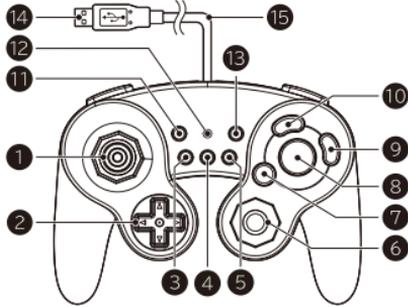

Nintendo Switch

- | | | | | |
|---|---------------|------------------|------------------|---------------|
| 1 Left Stick (Left Stick Button (Hold)) | 2 Control Pad | 3 Capture Button | 4 TURBO Button | 5 HOME Button |
| 6 Right Stick (Right Stick Button (Hold)) | 7 B Button | 8 A Button | 9 X Button | 10 Y Button |
| 11 - Button | 12 TURBO LED | 13 + Button | 14 USB Connector | |
| 15 Controller cable | 16 L Button | 17 ZL Button | 18 R Button | 19 ZR Button |

PC

- | | | | | |
|---|---------------|------------------------|------------------|----------------|
| 1 Left Stick (Left Stick Button (Hold)) | 2 Control Pad | 3 There is no function | 4 TURBO Button | 5 GUIDE Button |
| 6 Right Stick (Right Stick Button (Hold)) | 7 B Button | 8 A Button | 9 X Button | 10 Y Button |
| 11 BACK Button | 12 TURBO LED | 13 START Button | 14 USB Connector | |
| 15 Controller cable | 16 LT Button | 17 LB Button | 18 RT Button | 19 RB Button |

How to connect

Please insert the USB connector of the controller into the USB port of the Nintendo Switch™ Dock.

※ Do not connect to anything other than a USB port. It may cause a defect.






Connect it to the Nintendo Switch Dock USB port.

L/R to ZL/ZR Toggle Function

Switch button functions between L/R and ZL/ZR buttons.

How to switch


TURBO LED will turn off.

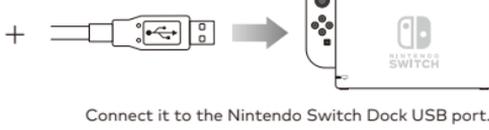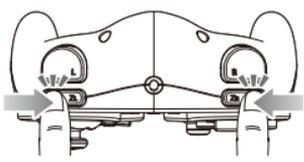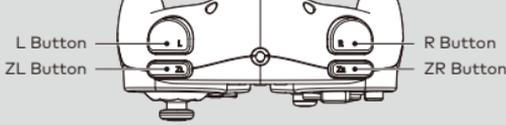

Connect it to the Nintendo Switch Dock USB port.

Press and hold the ZL and ZR buttons simultaneously and connect the USB connector to the Nintendo Switch Dock USB port.

TURBO LED (RED) will turn on.

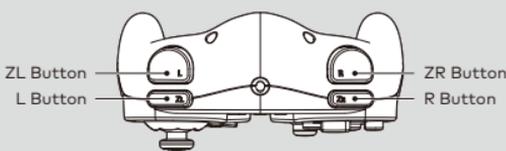

※ Settings will be saved even after you unplug the controller or turn off the power.

※ To reset the button settings, repeat the "How to switch" process.

※ Turning ON the Nintendo Switch while simultaneously pressing the ZL/ZR buttons with the USB connected will switch the button settings.

How to use the Turbo Functions

The Turbo hold function allows continuous rapid fire without having to hold the button. (Pressing the assigned button deactivates this).

The following buttons can be set to Turbo or Turbo hold mode:

A Button / B Button / X Button / Y Button / L Button / R Button / ZL Button / ZR Button / Control Pad (UP / DOWN / LEFT / RIGHT)

* Control Pad (UP, DOWN, LEFT or RIGHT) are not compatible with the Turbo hold mode, and can only be set to Turbo mode.

Setting method

Turbo LED Status

| | | |
|---|--|---|
| Turbo Mode <p>TURBO Button + A Button Hold the Turbo button and then press the button that you want to set to Turbo mode.</p> | Button ON <p>TURBO LED will flash. (Green or Orange)</p> | Button OFF <p>TURBO LED will turn on. (Green or Orange)</p> |
| Turbo Hold <p>TURBO Button + A Button Press the button once more, and the button will remain in Turbo (Turbo Hold).</p> | Button ON <p>TURBO LED will turn on. (Green or Orange)</p> | Button OFF <p>TURBO LED will flash. (Green or Orange)</p> |
| Turbo OFF <p>TURBO Button + - Button Pressing the button again once more will deactivate the Turbo function.</p> | <p>OFF</p> <p>※ LED will turn red while L/R and ZL/ZR button functions are deactivated. In the case that after the turbo function, the turbo Indicator LED does not turn off, this means that there is a button set to Turbo/Turbo Hold.</p> | |
| OFF (All buttons) <p>TURBO Button + - Button Hold the TURBO Button and press the SELECT Button.</p> | <p>OFF</p> <p>※ LED will turn red while L/R and ZL/ZR button functions are switched. If you forget which buttons you have set to Turbo mode, deactivate them all and reassign, as you require.</p> | |

* The Turbo LED will flash at a rate corresponding to the Turbo speed. The Turbo LED will flash as long as one of the buttons is in Turbo mode.
* By pressing the HOME Button, all Turbo function and Turbo hold settings will be deactivated.
* When restarting game play, you will need to set the Turbo function again.

* Turbo Function may not be compatible with all software titles. Please try adjusting the Turbo settings or simply turn OFF TURBO.

* Turbo function will deactivate when you unplug the USB connector.

How to change Turbo Speed

You can adjust the Turbo mode to 3 different speeds.

While pressing the Turbo Button, push up on the Right Analog Stick to change the Turbo speed in the following order :

5 times/second → 10 times/second → 20 times/second


While pressing the Turbo Button, push down on the Right Analog Stick to change the Turbo speed in the following order :

20 times/second → 10 times/second → 5 times/second

* Turbo speed is set to 10 times/second by default.

* Nintendo Switch will be returned to the neutral position before changing to the next turbo speed.

* The Turbo LED will flash at a rate corresponding to the Turbo speed for 2 seconds.

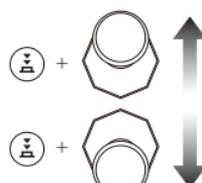

Main Features

- External dimensions : (width) 103mm x (depth) 141mm x (height) 69mm
- Cable length : (Overall length) Approximately 3 m ■ Weight : About 230g
- Rating : 5V 45mA

- This product is not a wireless controller.
- This product is not equipped with vibration function.
- The image on the packaging may differ from the actual product.
- The manufacturer reserves the right to change the product design or specifications without notice.
- Nintendo Switch logo, Nintendo Switch are trademarks of Nintendo.
- HORI & HORI logo are registered trademarks of HORI.

Target age : 6 years and over