

Instruction Manual

Thank you for purchasing this product.
Before using this product please read the instructions carefully.
After reading the instruction sheet, please keep it with you for reference.

Although the instruction manual states that the products is for the PlayStation®4 system,
it is also compatible with the PlayStation®3 system.
Please also refer to our website (<http://www.hori.jp/support/>) for additional information.

Troubleshooting

1. Pressing the PS button does not turn on the PlayStation®4 system

The PS button on this product will not turn on the PlayStation®4 system. Please press the PS button on the wireless controller (DUALSHOCK®4) or press the power button on the PlayStation®4 system.

2. The PS button does not respond during gameplay

Please check the PS4/PS3 System Toggle Switch on this product. Make sure it is set to "PS4" for PlayStation®4 and "PS3" for PlayStation®3. Set to "PS3" when using PC (Gamepad mode) and "KB" when using PC (Keyboard mode)

 
3. Controls respond in the home screen but not during gameplay

For the PlayStation®4, controls will not respond if the user account is different from the one used at the start of the game. Make sure to always log in with the same user account.

4. The controller will not respond upon pressing the PS button

You must first pair this controller with the PlayStation®4 system using a wireless controller (DUALSHOCK®4).

Includes

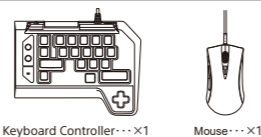

Caution



- Keep this product out of the reach of children under 3.
- Keep this product away from small children. Seek medical advice immediately if it is swallowed.
- Keep the controller away from dusty or humid areas.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the controller.
- Please do not pull on the buttons of this product.
- Never disassemble, repair or modify this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.
- Since it may cause failure, do not touch the stereo headphone/microphone/USB mouse terminals directly.
- Please do not look directly into the red optical sensor. There is the possibility for eye damage.

Compatible models

PlayStation®4 / PlayStation®3 / PC

Important

Before using this product with PlayStation®4 and PlayStation®3,
be sure to check the instruction manual of each hardware console.




[Hardware]	
System Requirements	Windows®10 / 8.1 / 8 / 7 USB port, Internet Connection
[TAC Software]	
System Requirements	iOS: 8.0 or later / Android: 4.4 or later
Accessories as PC controller through Wi-Fi	This product does not support this function.

Depending on the console software version, not all functions may be available.
In that case, please upgrade to the latest system software before use.
[PlayStation®4] → Ver. 4.73 or later recommended, PlayStation®3 → Ver. 2.80 or later recommended] Please refer to your console's user manual for system software version check and update instructions.

This product does not feature light bar, motion sensors. In addition, this product does not support features other than those described. Please note this product may not support some PlayStation®4 and PlayStation®3 standard software. For details, please visit our website (<http://www.hori.jp>) or contact us.

- * This product will not work on the PlayStation®2, PlayStation®e, or PS one.
- * This product is not a wireless controller or wireless mouse.

   Part names

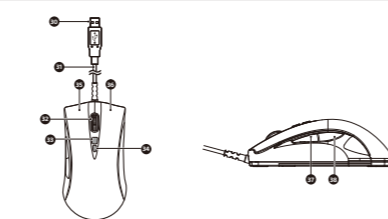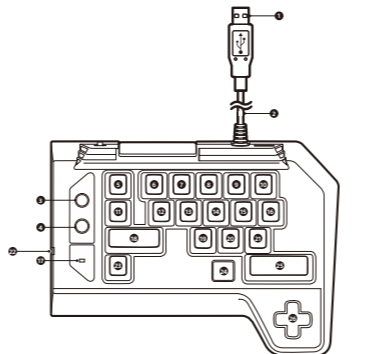


PlayStation®4	PlayStation®3	PC (Gamepad mode)	PlayStation®4 / PC (Keyboard mode)
Connector			
Controller cable (3.0m / 9.8ft)			
PS Button*		GUIDE Button	
SHARE Button	SELECT Button	BACK Button	Enter Key *
OPTIONS Button *	START Button *		ESC Key *
△ Button *		Y Button *	Q Key *
Left analog stick (↑) *		W Key *	
L1 Button *	L2 Button *	LB Button *	E Key *
□ Button *	X Button *	R Button *	R Key *
× Button *	A Button *	T Button *	T Key *
Quick Button *		TAB Key *	
Left analog stick (←) *		A Key *	
Left analog stick (↓) *		S Key *	
Left analog stick (→) *		D Key *	
Snipe Button *		F Key *	
R1 Button *	R2 Button *	RB Button *	G Key *
Profile LED *			
L3 Button *		USB Button *	LEFT SHIFT Key *
FN Button*			
□ Button *	B Button *	C Key *	
R3 Button *	RSB Button *	V Key *	
Extension port			
□ Button *		B Button *	LEFT CTRL key *
Walk Button *		Z Key *	
× Button *		A Button *	SPACE Key *
Directional Pad		W/A/S/D Key *	
USB port			
Touch pad functionality *		× Button *	A Button *
PS4™ / PS3™ System Toggle Switch		M Key *	
Connector			
Mouse Cable (1.0m / 3.3ft)			
Quick Start/Scroll/Focus/RB button		Scroll Wheel/Focus/RB button	Scroll Wheel
Quick Start/Scroll/Focus/RSB button		Scroll Wheel/Focus/RSB button	Scroll Wheel
Sensitivity Up			
Sensitivity Down			
R2 Button *	R1 Button *	R7 Button *	Left click *
L2 Button *	L1 Button *	L7 Button *	Right click *
L1 Button *	L2 Button *	LB Button *	Forward *
R1 Button *	R2 Button *	RB Button *	Back *

* - - Other buttons may be assigned. (To assign button function, please refer to the Assign Mode instructions.)
*The PS button will not turn the PlayStation®4 or PlayStation®3 system's power on.

How to connect

- Insert the USB connector of the mouse into the USB port of the keyboard controller.
In addition to the included mouse, other USB compliant mice may be used.
*Not compatible with all mice. *Compatibility not tested nor endorsed by Sony Interactive Entertainment Europe.
- Please insert the USB connector of the controller into the USB port of the PlayStation®4.
*Please set the PS4™/PS3™ System Toggle Switch to the desired console before connecting the product.
- Once the system is turned on, press and hold the PS button on the HORI controller.
- Select a User Profile with the HORI controller to activate the controller as Player 1 or Player 2.
*Select "Guest" or a different User Profile with the HORI controller to activate the controller as Player 2.

 - If your controller is not being recognized by your PlayStation®4, please try the following steps
- Check to see if your console has the latest updates on your firmware and software.
 - Restart your console.
 - Unplug and re-play your HORI controller into your PlayStation®4.
 - Follow steps 1-3 of "How to Connect"



PlayStation®4 / PlayStation®3 System Toggle Switch

 
The Platform Toggle Switch toggles between PlayStation®4 and PlayStation®3 compatibility. Switch the toggle switch to the desired platform before connecting.



USB port

This product has one USB port specifically for connecting a mouse.

- Please do not plug in anything besides a mouse.
- There is no guarantee that anything besides a mouse will function.
- Because there is protection against excess electrical current use, do not plug in any type of USB memory or USB charger.
- Please note that we cannot be held responsible for any type of data loss due to user misuse.
- This product uses up to 200mA.
- If a connected product is not functioning properly, it may be due to protection against excess electrical current. Please try unplugging the mouse from the keyboard and the PlayStation®4 console and reconnecting everything again. If it still does not function, please use another device.



About the Mouse

The included mouse uses an infrared sensor.

 
- *The infrared sensor may not function properly on top of the following materials.
- Transparent material such as glass
- Reflective material such as a mirror
- Red color material
- Mesh or any similarly patterned material

- Please do not look directly into the red optical sensor. There is the possibility for eye damage.

Expansion port (PlayStation®4 only)

Connect the headset into the Expansion port.
Before placing a headset onto your ears, make sure to lower the volume completely.

- Headset usage at high volumes for extended periods of time may result in permanent hearing damage.
 If the volume is raised too high, there may be sudden loud noises that may damage your ears.



Assign Mode (Button Assignment) Function

Each button function can be changed using the TAC Software.

Buttons marked with * in "Part names" can be assigned

Button functions that can be assigned	
PlayStation®4	○, ×, △, □, L1, RL, L2, R2, L3, RB, OPTIONS, Walk, Quick, Snipe, Touch pad functionality, Mute, Talk, FN, NC (No function)
Analog Stick	↑ ↓ ← → ↶ ↷
Left analog stick	↑ ↓ ← → ↶ ↷
Right analog stick	↑ ↓ ← → ↶ ↷
PlayStation®3	○, ×, △, □, L1, RL, L2, R2, L3, RB, START, Walk, Quick, Snipe, FN, NC (No function)
Analog Stick	↑ ↓ ← → ↶ ↷
Left analog stick	↑ ↓ ← → ↶ ↷
Right analog stick	↑ ↓ ← → ↶ ↷
PC (Gamepad mode)	A, B, X, Y, L3, RB, LT, RT, L3B, R3B, START, Walk, Quick, Snipe, FN, NC (No function)
Directional Pad	↑ ↓ ← → ↶ ↷
Left analog stick	↑ ↓ ← → ↶ ↷
Right analog stick	↑ ↓ ← → ↶ ↷

PC (Keyboard mode)	
Alphabet	A-Z
Number	0-9
Function	F1-F12
Special key	Esc, Tab, Caps Lock, Shift, Ctrl, Alt, Space, Enter, Back Space, Delete
Analog Stick	↑ ↓ ← →
Other	Print Screen, Scroll Lock, Pause/Break, Insert, Home, Delete, End, Page Up, Page Down
Numeric keypad	Num Lock, Num/, Num*, Num+, Num-, Num=, NumEnter, Num_ Num0-Num9
Original	NC (No function), FN
Mouse function	Right Mouse Button, Left Mouse Button, Scroll Wheel, Forward, Back, Scroll up, Scroll down

Profile Change Function

Button layouts for the PlayStation®4, PlayStation®3 and PC (Gamepad mode, Keyboard mode) can be saved to 8 different profiles. Profiles can easily be switched.

- <How to switch>
- While holding down on the FN button, press the corresponding button as shown in the chart.
 - Profile will be switched.

- The FN button function will also work even if it is assigned to another button.


Profile	How to set	Profile LED
1	FN Button +	Light yellow
2	FN Button +	Green
3	FN Button +	Yellow
4	FN Button +	Red
5	FN Button +	Purple
6	FN Button +	Blue
7	FN Button +	Light blue
8	FN Button +	White

Mouse Sensitivity Adjustment

Mouse sensitivity can be adjusted with 4 increments.


- <How to set>
Press the (+) button to increase or (-) button to decrease dpi.

dpi	1600	2000	2800	3200
-----	------	------	------	------

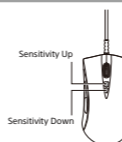 


FN Button

 The function of the Analog Stick and Direction Keys are switched as below while the FN Key is held down.

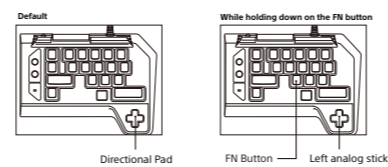

Quick Button

 
Pressing the quick button maximizes mouse output value. Movement of the mouse translates to maximum lateral movement of the first person view. Select from 4 settings within the TAC Software to adjust maximum movement speed.

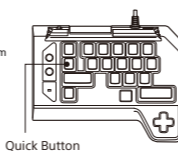

Walk Button

Pressing the left analog stick keys while holding the Walk button is similar to slightly tilting the left analogstick of a conventional controller.

 
Sensitivity can be adjusted using the TAC software.

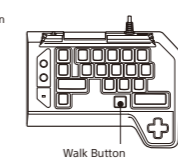

Snipe Button

Hold the Snipe Button to temporarily reduce mouse sensitivity for increased accuracy.

 Sensitivity can be adjusted using the TAC software.

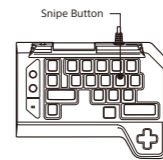

Touchpad Functionality

This product features DUALSHOCK®4 Touchpad functionality. The area of the touch pad is as shown below.


The area of the touch pad (PlayStation®4)	PlayStation®3	PC (Gamepad mode)	PC (Keyboard mode)
DOWN RIGHT LEFT UP	× Button × Button A Button × Button	A Button A Button	M Key M Key

Defaults (button assign, sensitivity settings)

How to reset to default settings (all profiles)

Resets each button and each sensitivity setting to its default state in all profiles.

 - <How to switch>
- Press and hold down the FN button and PS button simultaneously for 3-5 seconds.
 - Reset is complete once the profile LED flashes.

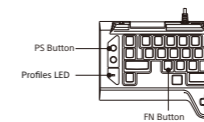

How to use the TAC Software

HORI Device Manager

System Requirements
iOS: 8.0 or later Android: 4.4 or later

<How to download>

For iOS
① Search for "HORI" or "HORI CO., LTD." in the APP Store.
② Install "HORI Device Manager".

For Android
① Search for "HORI" or "HORI CO., LTD." in Google Play.
② Install "HORI Device Manager".

*Make sure the developer is "HORI CO., LTD."
*Make sure Bluetooth on your equipment is turned on. Press "Allow" when prompted access to location, photos, media, file. Pairing is completed by press "Search" and touching the item found online.

The following functions can be set using the TAC Software.

- Assign Mode (Button Assignment) Function
- Mouse Acceleration Adjustment
- ADS Mouse Acceleration Adjustment
- DP / LS Toggle Switch
- Deadzone Adjustment
- ADS (Aim Down Sight) Deadzone Adjustment
- ADS Lock Feature
- Turning Off Backlight
- Defaults (button assign, sensitivity settings)
- Linear Correction Function
- Acceleration Curve Function

● The image on the package may differ from the actual product.
● The manufacturer has the right to change the spec of the product without any notification.
● "PlayStation", "PS one" and "DUALSHOCK" are registered trademarks of Sony Interactive Entertainment Inc.
● "DUALSHOCK" are registered trademarks of HORI.
● All other trademarks are the property of their respective owners.

PRODUCT NAME:
TACTICAL ASSAULT COMMANDER K2
for PlayStation®4 / PlayStation®3 / PC

MODEL: PS4-124
Manufacturer: HORI (H.K.) CO., LTD.
Enterprise Standard: Q/XY014-2016
MAIL: key_support@hori.jp
MADE IN CHINA