


Instruction Manual

Please read carefully Follow this guide to attach accordingly

Thank you for purchasing this product.
Before using this product please read the instructions carefully.
After reading the instruction manual, please keep it for reference.

Included

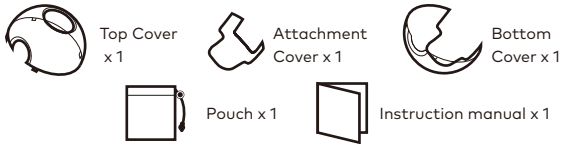

Platform

Poké Ball Plus


● The image on the package may differ from the actual product.
 ● The manufacturer has the right to change the spec of the product without any notification.
 ● "Pokémon," "Poké Ball" are registered trademarks or trademarks of Nintendo, Creatures, and Game Freak. All rights reserved. All other trademarks are the property of their respective owners.
 Manufactured and distributed under license from Nintendo.
 ● "HORI" and "HORI" are registered trademarks of HORI.
 ©2018 Pokémon. ©1995-2018 Nintendo/Creatures Inc./GAME FREAK Inc.

Caution To Parental guardians: Please be sure to read

- Small parts. Keep this product out of the reach of children under 3. Seek medical advice immediately if swallowed.
- Do not place it within the reach of infants.
- Do not use excessive force to remove as it may damage the product.
- Do not store if product is covered in dust or dirt.
- Keep the controller away from dusty or humid areas.
- Do not leave in direct sunlight or a hot place for an extended period of time.
- Direct sunlight may cause discoloration. Be cautious of where you store the product.
- Do not use in close proximity of fire.
- Use diluted neutral detergent to clean this product. Dry it completely before using the product again.
- Do not use any chemical agents like benzene or thinner.
- This product is not water proof. Do not get the Poké Ball Plus wet while this product is attached.
- Do not bump, drop, or roughly handle this product.
- Do not use this product if damaged or altered.
- Never disassemble, repair or modify this product.
- This product is not made to protect the Poké Ball Plus from impact.
- Do not use this product for anything other than its intended use.
- HORI is not responsible for any damages or data loss due to mishandling of the product.


How to Install

① Attach the attachment cover to the inside of the bottom cover.

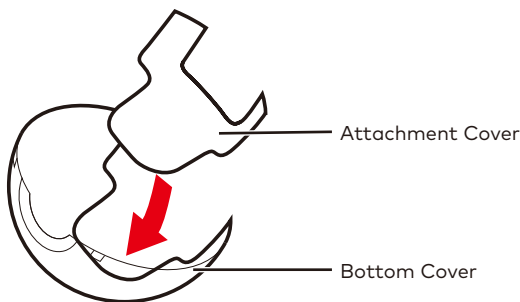


You do not have to attach the attachment cover if you are using the Poké Ball Plus Charge Stand (sold separately).


② Align the Poké Ball Plus accordingly.

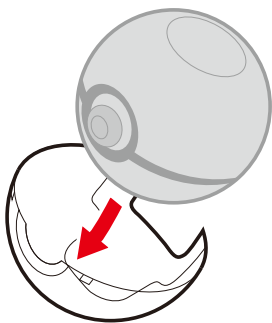

Be cautious of the angle.

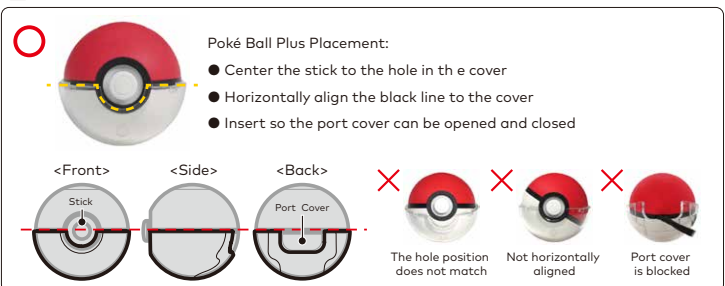


③ Align the hole and clip position to attach the top cover.

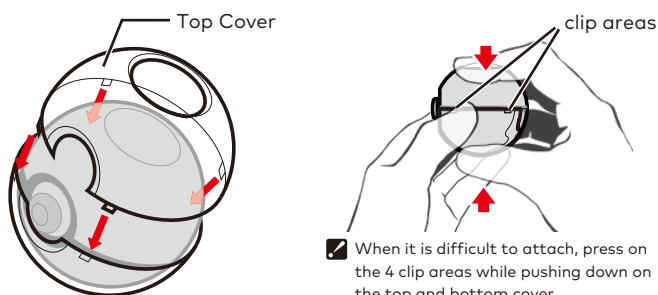


Attachment complete

How to Remove

- ① Place your finger on the opening of the attachment cover.

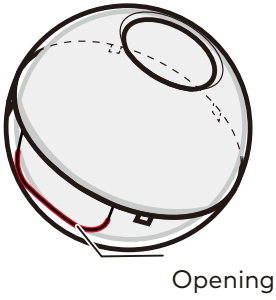


- ② Remove by detaching the upper and lower covers.

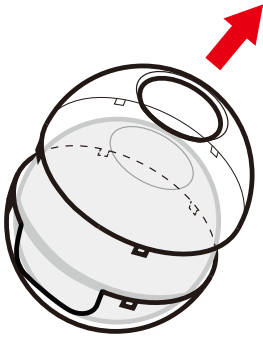

When it is difficult to remove

- Squeeze the four clip areas and detach the top and bottom cover.

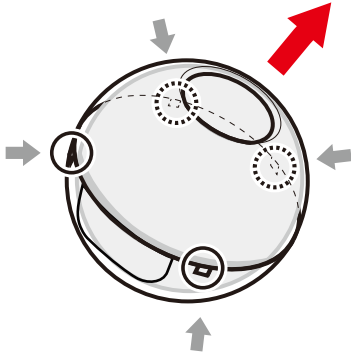

- Lift the attachment cover opening outward and remove clips individually to remove the top cover.



- ☑ Do not use this product if the product is damaged or altered.
- ☑ The cover may come off if you pull hard on the strap. If the cover comes off, remove the cover and attach again.
- ☑ It may be difficult to remove the cover with long nails. Be cautious not to get scratched.