

# Instruction Manual

Thank you for purchasing this product.  
Before using this product please read the instructions carefully.  
After reading the instruction manual, please keep it for reference.

## Caution



**Parents/Guardians:**

**Please read the following information carefully.**

## Warnings

- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Keep the product away from dusty or humid areas.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not apply strong impact or weight on the product.
- Do not place anything on top of this product.
- Do not use this product if it has been damaged or modified.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.

 
## **Warnings for the Joy-Con™ Charge Stand**

- Pulling on the cable may cause the Nintendo Switch™ or Joy-Con Charge Stand to fall, which may cause injuries.
- Discontinue use if you notice unusual heat, smoke, noise, or smell coming off of the product.
- Do not place on unstable surface.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not cover product with cloth. Doing so may cause overheating.
- Do not put water or foreign substances inside this product. Doing so may cause fire, electric shock, or malfunction.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not use this product when there is a risk of lightning storm to avoid fire, electric shock, or malfunction.
- Please do not use too much force when connecting or disconnecting product to the Nintendo Switch Dock.
- Please check that the connectors are clean before use. If the product needs cleaning, use a soft dry cloth only.
- Check the connector direction before inserting.
- Do not touch the metal parts of the USB plug.
- Do not use the USB plug when it's covered with dust.
- Do not modify or damage the cables as this may cause a fire or electric shock.
- Do not twist or bundle the cables.
- Do not pull roughly or bend the cable of the product.
- When not in use or while cleaning, please disconnect this product from the Nintendo Switch.

## Warnings for the Joy-Con™ Covers

- If this product is damaged, never put the broken pieces in your mouth as you may choke. Please keep away from children 3 years or younger as this is a choking hazard.
- Do not carry or hold on to just the cover when it is attached to the Joy-Con as it may cause damage.
- Please be careful when attaching and detaching the Joy-Con Covers as excessive force may cause damage.
- Please be sure to clean the Joy-Con before attaching this product.
- This product is not waterproof. Please do not get the Joy-Con wet while attached.
- If this product gets dirty, please clean it with a mild detergent and a damp cloth.
- This product is not made to protect the Nintendo Switch system's from impact.

\* This product cannot be attached when using the below accessories.

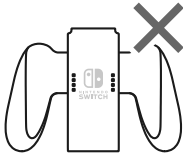


• Joy-Con™ Grip

• Joy-Con™ Charging Grip



 
• Joy-Con™ Wheel

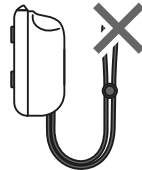


• Nintendo Joy-Con AA  
Battery Pack

# Include

 
\* This product does not include the Joy-Con controllers.

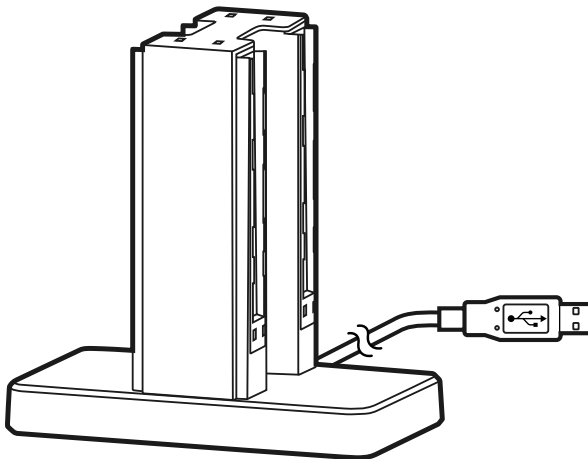

Joy-Con Charge Stand x1

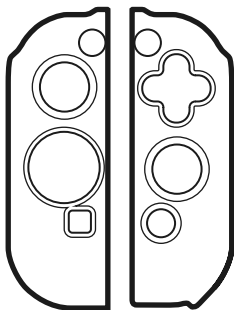 

Top Cover (L/R) x1

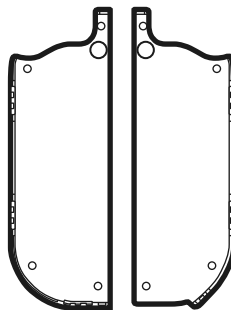 

Bottom Cover (L/R) x1

# Platform

## Nintendo Switch

 
### Important

Before using this product with the Nintendo Switch, please read the following instructions carefully.

Please check that your Nintendo Switch™ is updated to the latest system firmware.


# How to use the Joy-Con Charge Stand

## Layout

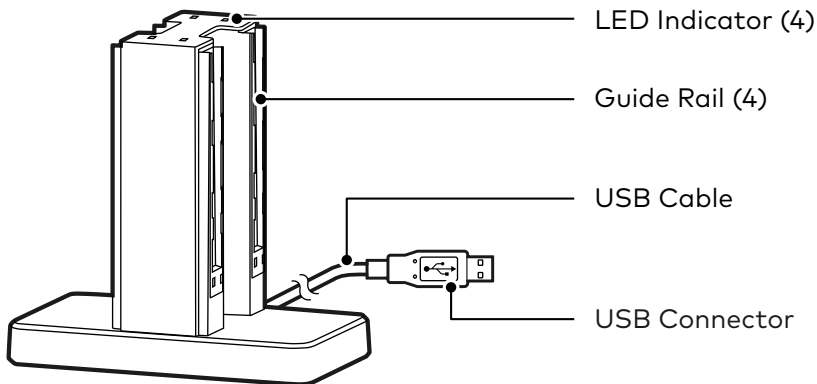

## How to Connect

 Turn off the Nintendo Switch and firmly connect the USB to the dock.

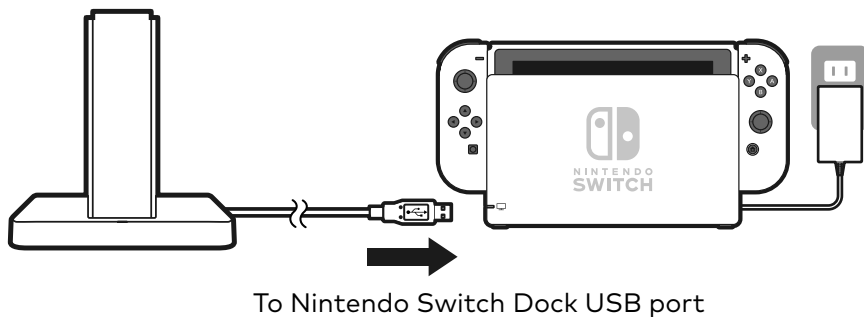


\* Do not connect the USB to anything other than the dock as it may cause a malfunction.

\* This product is intended to be charged through the Nintendo Switch dock. We are not responsible for any problems caused by connecting this product to other devices.

# Charge

 Slide the Joy-Con to the bottom of the rail.  
The upper LED will turn red when charging.  
The LED will turn off when charging is complete.

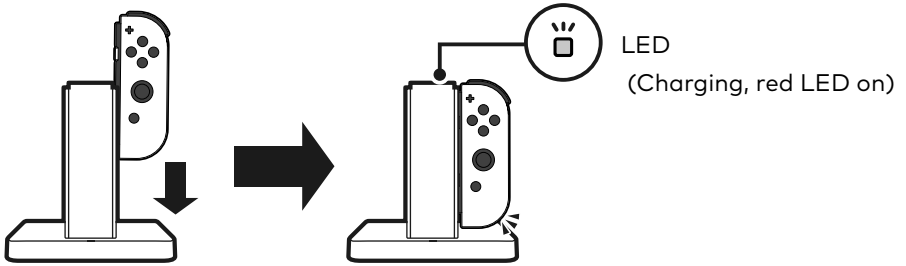

## Charging Time

For 1 ~ 2 controllers: 3.5 hours /  
For 3 ~ 4 controllers: 7 hours

\* Charging times may vary.

- \* Do not forcibly attach or detach the Joy-Con controllers.
- \* Do not attach the Joy-Con controllers upside down.
- \* Please remove the Joy-Con strap before charging.

 
 
# About the Protection Circuit

This product includes a built-in protection circuit. When the protection circuit activates, an red LED will blink and stop the product from charging. When the product is at this state unplug it and inspect to see if it is damaged or overheating. If you cannot determine the issue, please stop using the product and contact HORI customer support.

# Cover

## Attach the Joy-Con Covers

Please attach the Top and Bottom Covers as shown in the diagram below.

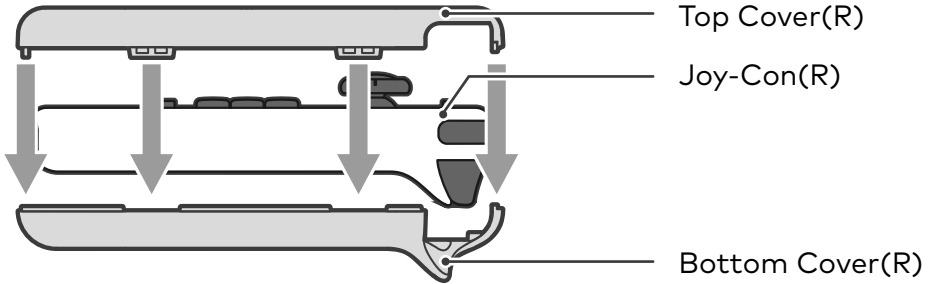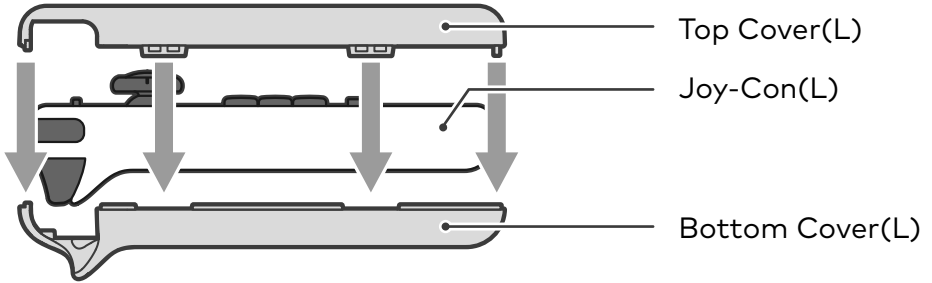


\* Push the covers together until you hear a Click sound.

# Remove the Joy-Con Covers

 
As shown in the figure below, gently push the corner of the Bottom Cover in the same direction as the arrows.

①

Cover(L)

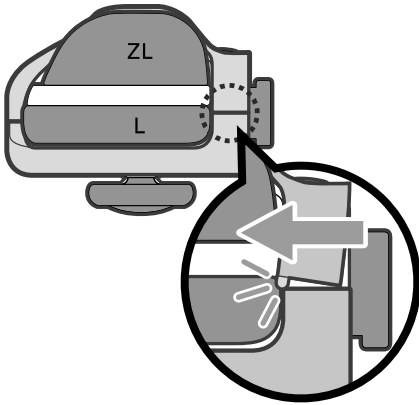


Cover(R)

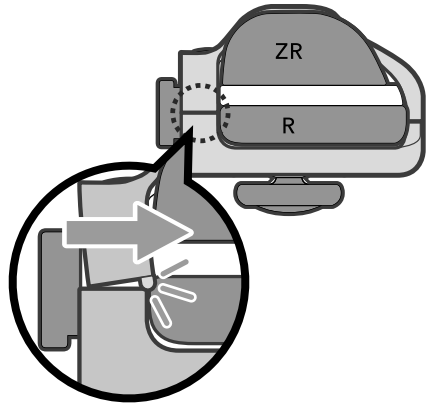 


②

 Cover(L)

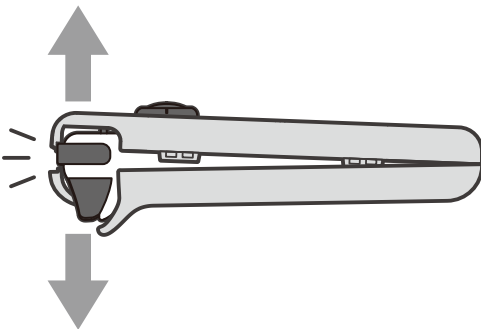

Cover(R)

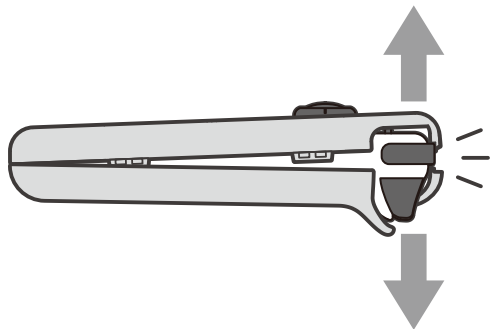 

\* Please do not forcefully detach the product as it may cause damage.



# Main Features

## Joy-Con Charge Stand

External Dimensions	: 120 × 66 × 122mm
Weight	: 160g
Cable Length	: 0.6m
Charging Time	: For 1~2 controllers: 3.5 hours / For 3~4 controllers: 7 hours

\* Charging time is approximate. Charging time varies.

## Cover (L/R)

External Dimensions	: 35 × 104mm × 24mm
Weight	: 12g

## THE FCC WANTS YOU TO KNOW

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The normal function of the product may be disturbed by strong electro-magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual (How to connect). In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product.

The wires are not to be inserted into socket-outlets.

The packaging must be retained since it contains important information.

## PRODUCT DISPOSAL INFORMATION

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste. Applicable to EU countries and Turkey only.



EU and Turkey only

US

### Warranty

HORI warrants to the original purchaser that the product purchased new in its original packaging shall be free of any defects in material and workmanship for a period of 90 days from the original date of purchase. If the warranty claim cannot be processed through the original retailer please contact HORI customer support directly at [info@hori.jp](mailto:info@hori.jp). Please visit <http://stores.horiusa.com/policies/> for warranty details.

EU

### Warranty

For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other inquiries pertaining to our products, please contact HORI customer support directly at [infoeu@hori.jp](mailto:infoeu@hori.jp).

- The image on the package may differ from the actual product.
- The manufacturer reserves the right to change the product design or specifications without notice.
- Nintendo Switch is a trademark of Nintendo. Licensed by Nintendo.
- HORI & HORI logo are registered trademarks of HORI.



MADE IN CHINA

Ages 6+