

Instruction Manual

Thank you for purchasing this product.
Before using this product please read the instructions carefully.
After reading the instruction manual, please keep it for reference.

Caution



This product is intended to be charged through the PlayStation® 5. We are not responsible for any problems that may be caused by connecting this product to other devices.



 
Caution **Parents/Guardians:**
Please read the following information carefully.

- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Keep the product away from dusty or humid areas.
- Do not apply strong impact or weight on the product.
- Do not place anything on top of this product.
- Do not use this product if it has been damaged or modified.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.

- Please place product out of reach of children. Pulling on the cable may cause the PlayStation®5 to fall, which may cause injuries, and the cable is potential a strangulation hazard.
 - Discontinue use if you notice unusual heat, smoke, noise, or smell coming off of the product.
 - Do not place on unstable surface.
 - Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
 - Do not get this product wet. This may cause an electric shock or malfunction.
 - Do not cover product with cloth. Doing so may cause overheating.
 - Do not put water or foreign substances inside this product. Doing so may cause fire, electric shock, or malfunction.
 - Please do not touch with wet hands. This may cause electric shock.
 - Do not use this product when there is a risk of lightning storm to avoid fire, electric shock, or malfunction.
 - Do not use too much force when connecting or disconnecting from the PlayStation®5.
 - Please check that the connectors are clean before use. If the product needs cleaning, use a soft dry cloth only.
 - Do not touch the metal parts of the USB plug.
 - Do not use the USB plug when it's covered with dust.
 - Do not modify or damage the cables as this may cause a fire or electric shock.
 - Do not twist or bundle the cable.
 - Do not pull roughly or bend the cable of the product.
 - Please disconnect after use or before maintenance to avoid fire or electric shock.
-

Included

Charging Station × 1

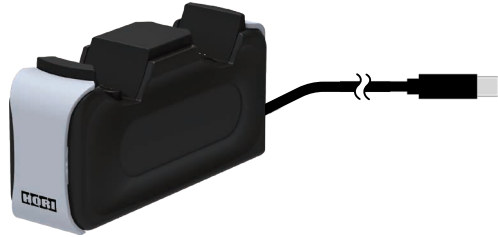

Wireless Controller Compatibility

Wireless Controller Compatibility Chart


✓ DualSense™ Wireless Controller	✗ DUALSHOCK® 4 Wireless Controller
	✗ DUALSHOCK® 3 Wireless Controller
	✗ SIXAXIS™ Wireless Controller

Important

Before using this product, please read the instruction manual for the PlayStation® 5 and the DualSense™ Wireless Controller.


Check that your PlayStation® 5 is updated to the latest system firmware.

 Layout

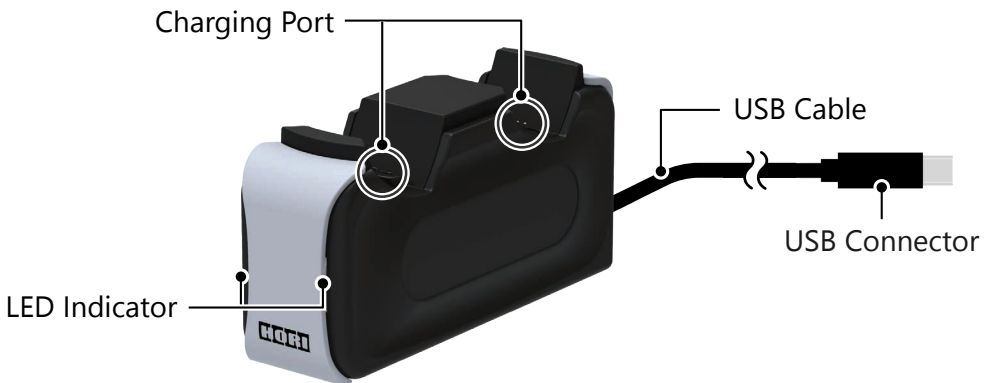

How to Use

 - 1 Plug the Charger into the PlayStation® 5.

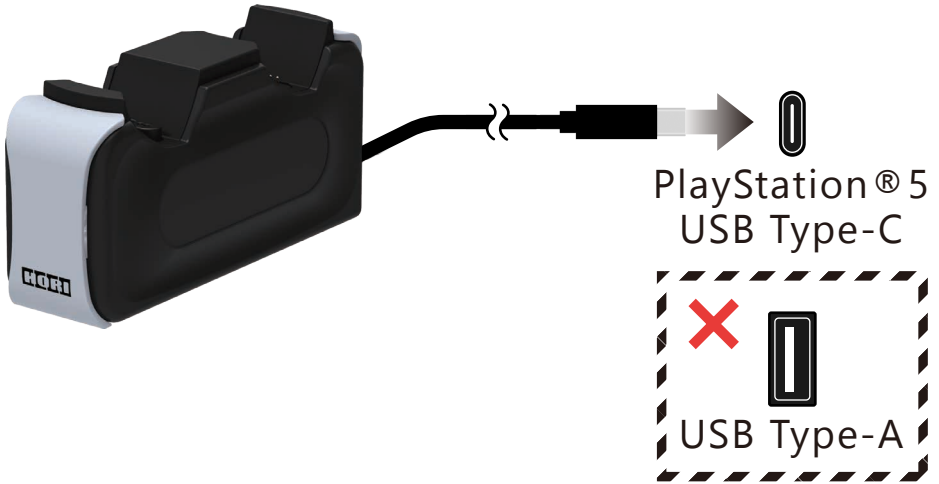



- 2 Place the DualSense™ Wireless Controller onto the Charger.



3

The DualSense™ Wireless Controller will flash orange while charging and will turn off when charge is complete.



	PlayStation®5 Power On / rest mode*		PlayStation®5 Power Off
---	---	---	----------------------------

* To charge your controller while your console is in rest mode:
Go to Settings > System > Power Saving > Features Available in Rest Mode,
and set Supply Power to USB Ports to Always or 3 Hours.

* When the DualSense™ Wireless Controller is turned on, the LED on the
controller will not blink.
In this case, press the DualSense™ Wireless Controller PS Button to check the
remaining battery icon on screen.

Main Features

External Dimensions	: 127 × 40 × 60mm
Weight	: 180g
Cable Length	: 0.6m
Connection Method	: USB Type-C
Input	: 5V
Output	: 3A(max)

The image on the package may differ from the actual product.

The manufacturer reserves the right to change the product design or specifications without notice.

"PlayStation", "DualSense", "DUALSHOCK", and "SIXAXIS" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved. All other trademarks are the property of their respective owners.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

HORI & HORI logo are registered trademarks of HORI.

Ages 6+